


WeeGo®

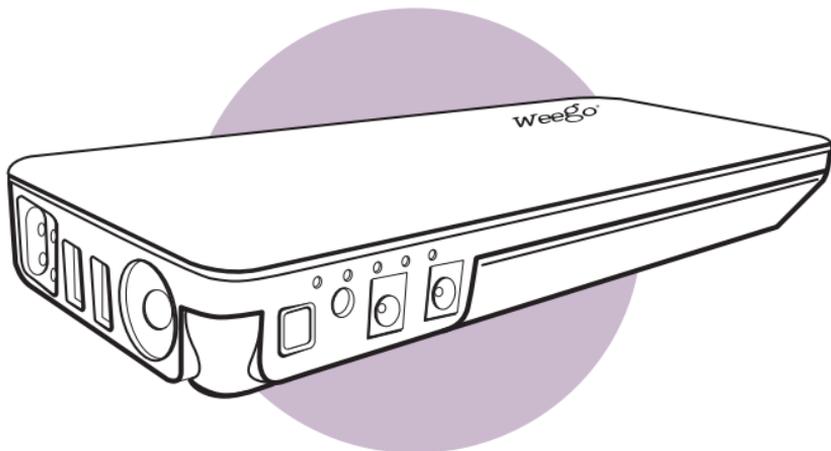

Jump Starter Battery+

Model# JS18 PROFESSIONAL 18000 mAh

Owner's Manual



Thank you for choosing Weego Jump Starter model JS18.

Always follow basic safety precautions when using electronics or jump starting a vehicle.

Read all instructions carefully. Please keep this instruction manual for easy reference or you can download an electronic copy at www.myweego.com/support.



Weego At A Glance

Weego[®]

Here, there, everywhere[®]



12V JUMP STARTER

BUILT-IN SAFETY PROTECTIONS



INDEPENDENT LAB TESTED



18-MONTH WARRANTY




ONLY LOSES 2-5% OF CHARGE PER MONTH

1000 CHARGE CYCLES YEARS OF DEPENDABLE USE

RECHARGES IN AS LITTLE AS 5 HRS

OPERATING TEMPERATURE RANGE -4 TO 140°F

Weego At A Glance

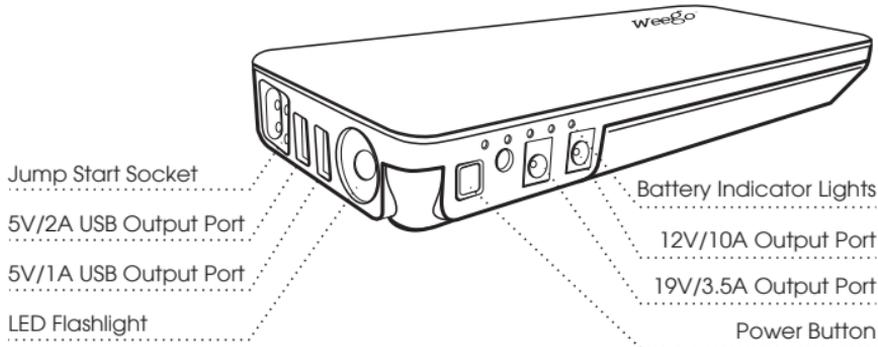

Quick Start Guide – Ready, Get Set, Jump Your Vehicle!


BEFORE JUMP STARTING YOUR VEHICLE

- For 12V Vehicles ONLY! Do not use with any other system (6V, 24V, etc.)
- Read vehicle owner's manual: The vehicle manufacturer may have specific cautions and instructions about jumping your vehicle of which you should be aware.
- Put your vehicle in PARK and engage the emergency break.
- **Turn off ALL electronics in your vehicle** (air conditioner, heat, radio, lights, chargers, etc.) to ensure optimal performance of your Weego and safety of your electronics.
- Remove any and all USB and/or charging devices connected to your Weego.
- Make sure the vehicle battery terminals, jumper cables and Weego unit are free of any moisture.


JUMP STARTING YOUR VEHICLE

1. Ensure key is in the "OFF" position in the ignition. For smart-key fobs (push-to-start vehicles), make sure the vehicle is completely "OFF" before jump starting.
2. Identify the positive and negative terminals on your vehicle's battery. The positive terminal will usually be labeled with a (+) and/or red coloring.

3. **Do not attach clamps to Weego yet!** First, securely attach the black clamp to the vehicle's negative (-) battery terminal, then the red clamp to the vehicle's positive (+) battery terminal. **Be sure to adjust your clamps to achieve MAXIMUM contact on both sides of the clamps.** Clamp connection is a 'good, better, best' scenario — a poor or miniscule connection will prevent you from starting your engine.

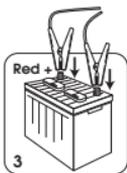


4. Make sure your Weego is OFF.
5. Securely fasten the clamps into your Weego. Check that you have a secure connection between the terminals and clamps, and between the clamps and Weego. Check the lights on the clamps:

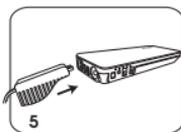

- a. **IF RED LIGHT IS ON AND ALARM SOUNDS:** You have connected the clamps to the wrong terminals. Please reread and follow step 3. **DO NOT PRESS "BOOST"!**
- b. **IF GREEN LIGHT IS ON:** Your battery is still at a healthy level. **DO NOT PRESS "BOOST"**.
- c. **IF GREEN LIGHT IS BLINKING AND ALARM SOUNDS:** Your battery is at a low, unhealthy level. You will need to press "BOOST" to jump start your vehicle.
- d. **IF NO LIGHT IS ON:** You either have a poor connection, or your battery is extremely low. Recheck all connections. If still no light appears, press "BOOST".




6. Place your Weego in a secure location so it will not fall when starting the vehicle.
7. Power ON your Weego. Start your vehicle.

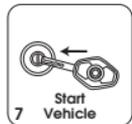


- a. **If after 3 seconds engine does not start, turn key to OFF position.**

- b. Detach your Weego from the clamps. Wait 60 seconds and then follow steps 1-7. If problems still persist, please see the Troubleshooting section in your Weego Owner's Manual for other possible causes.

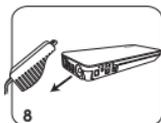

8. After a successful start, quickly detach your Weego from the clamps.
9. Detach the clamps from the vehicle's battery.

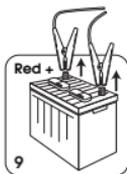


10. You are now able to drive your vehicle. You should be sure to run your vehicle for at least 15 minutes before shutting it off again.

Operation Guide:

Indicator Lights


Your JS18 Weego Jump Starter has 5 indicator lights to determine the amount of power in the unit.

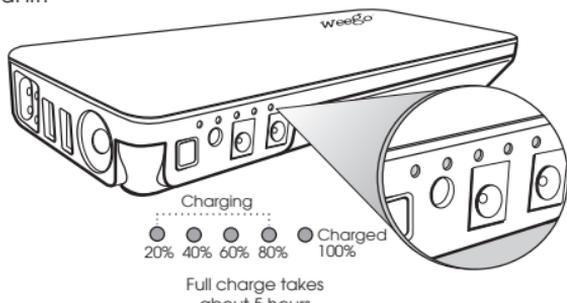

- Press the power button to activate the lights. The display above shows the level of power in relation to the number of lights illuminated.
- The indicator lights will flash one by one when the unit is charging. A solid light indicates a complete level of charge. For example, when 2 lights are illuminated and a third is blinking, that means the unit is between 40-60% charged. Once the third light stops blinking the unit is 60% charged.
- When all the indicator lights are solid, the charging is complete and the unit will automatically turn off.

Charging Your JS18 Weego Jump Starter

Your Weego Jump Starter has two options for charging the unit:

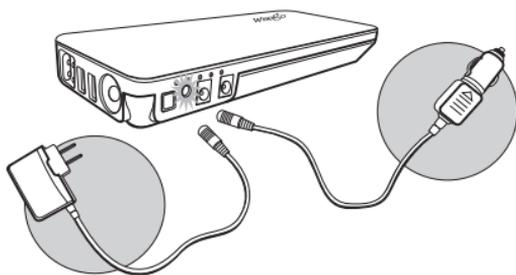

1. With the wall plug


2. With the car adaptor in your vehicle

- Connect the wall plug or the car adaptor into the 14V/1A input port of your Weego Jump Starter and start charging!

Charging a Phone, Tablet or Other USB Devices

Your Weego Jump Starter JS18 comes with two USB charging ports located at the front of the unit:

- Plug the USB cable into the USB output on your Weego Jump Starter.
- Connect it to your smartphone, tablet or other USB devices you want to charge. USB pigtail can charge up to two devices at a time.
- Power on your Weego and start charging!

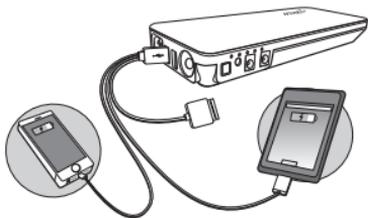


Flashlight

Your Weego Jump Starter comes with LED flashlight that has a number of different settings:

- Press the power button for 3 seconds to start the LED flashlight. There are 3 modes of LED light that appear in the following order:


1st click: Normal 3rd click: SOS
2nd click: Strobe 4th click: OFF

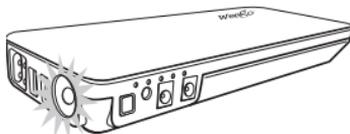

Charging a Laptop

Your Weego Jump Starter provides you with 8 tips and an adaptor to charge a variety of popular laptops including: Acer, Dell, Fujitsu, HP, IBM, Lenovo, Samsung, Sony and Toshiba.

Your Weego has two outputs (12V and 19V) which are able to charge your laptop. You must check your laptop charger's voltage output rating (on back of your laptop's charger) or read your laptop owner's manual to find out what voltage your laptop requires (12V or 19V). Once you know this, use the output voltage on your Weego closest to that of your laptop's voltage requirement.

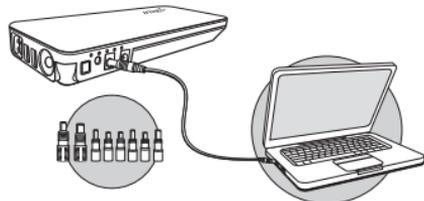

- Select the appropriate charger tip for your laptop
- Plug the adaptor cable into the 19V or 12V output
- Turn your Weego on and start charging!

Jump Starting a Vehicle:

Please see your Weego Quick Start Guide for step-by-step procedures on how to jump your vehicle.

By owning a Weego Jump Starter you have everything you need to jump start a vehicle - no need to wait for help, Weego to the rescue!

We know you're excited, but before jumping your vehicle please be sure to take some precautionary steps:

- Read your vehicle owner's manual first as the manufacturer may have specific steps and precautions that pertain to your vehicle.
- Thoroughly follow your Weego Quick Start Guide and review your Weego Owner's Manual.
- Be sure to turn off all electronics in your car (radio, lights, etc.) before jump starting.
- Make sure you are in a dry, well-ventilated area. Never jump start a vehicle in an enclosed area.
- Remove any moisture from your Weego unit, accessories, and your vehicle's battery. NEVER attempt to jump start a vehicle when moisture is present.
- Check that the vehicle's battery terminals are clean to ensure the best conductivity.
- Properly identify the vehicle battery's positive (+, red) and negative (-, black) terminals before connecting the clamps.
- When using the clamps, DO NOT allow the metal teeth of the black clamp to touch the metal teeth of the red clamp.
- When using the clamps, DO NOT connect the RED clamp to the vehicle battery's negative (-) terminal, or the BLACK clamp to the vehicle battery's positive (+) terminal.
- When connecting Weego clamps to the battery terminals, ensure the copper teeth on each side of the clamp make good contact with the terminal. The better the connection, the easier it will be to start your vehicle.

NOTE: When adjusting the clamps please be sure to first disconnect your Weego. This will prevent the occurrence of minor sparks.

General Guidance: Weego Model to Engine Size

Weego Jump Starters can be used on gas and diesel engines as follows:

- **Model# JS6 Standard:** Up to 4.6 liter gas engines/2.4 liter diesel engines*
- **Model# JS12 Heavy Duty:** Up to 6.4 liter gas engines/3.2 liter diesel engines*
- **Model# JS18 Professional:** Up to 9.6 liter gas engines, and up to 4.8 liter diesel engines*

* Engine size is approximate; power requirement will vary for each vehicle.

NOTE: Extreme cold temperatures affect battery performance. If you operate in these conditions for any length of time, consider the next largest Weego.

Product Service or Parts for Your Weego

For questions about operating or using your new Weego Jump Starter or for replacement parts, **PLEASE CONTACT WEEGO FIRST at www.myweego.com/support. Do not return this product to the store!**

Should this product require factory service or replacements please contact Weego directly. This will ensure the fastest turn-around time.

Important Safety Information

WARNING: Read all instructions and warnings prior to using this product. Improper use of this product may result in product damage, excess heat, toxic fumes, fire or explosion, for which Paris Corporation is not responsible.

- For 12V vehicles ONLY. Use of this product for any other vehicles is dangerous to user, product and vehicle.
- Always read all instructions carefully before using your Weego Jump Starter.
- Do not submerge your Weego Jump Starter in water, or expose it to rain or moisture.
- Never open or disassemble your Weego Jump Starter as it will void your warranty.
- Do not expose your Weego Jump Starter to fire, intense heat, or flammable liquids.
- Only charge the product at temperatures between 32°F (0°C) to 114°F (46°C)
- Keep away from and out of reach of children.
- Do not insert foreign objects into ANY inputs or outputs.
- Do not use this product where there are flammable fumes, gases, or dust present.

- Only use this product in a well-ventilated area.
- Do not allow the metal teeth of the red clamp to touch the metal teeth of the black clamp when connected to your Weego.
- Do not connect the black clamp to the vehicle battery's positive (+) terminal when connected to your Weego. Do not connect the red clamp to the vehicle battery's negative (-) terminal when connected to your Weego.
- Do not open your Weego to replace the internal battery. No user-replaceable parts are inside your Weego.
- Do not store your Weego for an extended period of time in temperatures over 86°F (30°C) or under -4°F (-20°C), as this could decrease the performance of your battery.
- Do not expose your Weego to temperatures over +140°F (60°C) as this could create a safety hazard.
- Always disconnect the jump start cables from your Weego after use and store separately.
- Do not crush, puncture, or penetrate your Weego as this poses a safety risk.
- In the extremely unlikely event that any corrosive liquid seeps from your Weego, discontinue use. If any corrosive liquid comes in contact with your skin or eyes, immediately wash with running water and consult a doctor.
- Your Weego must be disposed of properly when it is no longer able to be used. You need to recycle your lithium-ion battery at a local facility. To find your nearest facility call 1-800-822-8837.
- If there are any problems with the product or a malfunction occurs during usage, immediately discontinue use and contact us at support@myweego.com

FAQ's

Q: My car won't start. How do I know the battery is the issue?

A: While key is in OFF position, turn on your headlights and interior lights.

- Turn key to ON position. If the lights dim after you turn key to ON, your battery is weak and needs to be jumped.
- Turn key to ON position. Turn on windshield wipers. If wipers are slower than usual, your battery is weak and needs to be jumped.

Q: How do I turn off my Weego Jump Starter?

A: Your Weego Jump Starter will power off automatically when not in use.

Q: How many jumps can you get from each charge?

A: You'll be able to get several jumps out of a full charge, but just how many depends on a number of factors:

- Engine size, type and condition
- Amount of charge left in the engine's battery
- Outside temperature (extreme cold will diminish the performance of any battery)
- The Weego being used – model JS6, JS12, or JS18

Q: How many times can my Weego Jump Starter charge a cell phone, tablet or other portable devices, and how long will it take?

A: This will be different for every device as all portable devices' batteries have different power requirements and capacities.

Q: What is the lifespan of my Weego Jump Starter?

A: Your Weego jump starter can be fully charged and discharged up to 1,000 times under ideal conditions. Your Weego will typically last for several years.

Q: How long will my Weego Jump Starter hold a charge when not in use?

A: Our batteries only lose about 2-5% of their charge per month, so if you let it sit for a year you'll still have charge left over; however, we recommend that you recharge your Weego Jump Starter every 3 months to guarantee successful performance when needed. We also recommend you store your Weego at 40 - 60% charge, not 100%.

Troubleshooting

I followed the necessary steps but my vehicle is still unable to start. Now what?

After an unsuccessful jump, do not attempt again for another 60 seconds.

- Was your Weego powered ON before starting the vehicle?
 - Remember, there is an auto-off feature on your Weego. If you do not try to start your car within 30 seconds of powering ON your Weego, it will automatically shut itself off.

Troubleshooting, con't

- Do you have a good connection?
 - A poor connection between the clamps and the terminals can prevent a successful engine start. Disconnect your Weego from the clamps, and then adjust the clamps to ensure the maximum connection on both sides of each clamp. Reconnect your Weego and try again.
- Was your vehicle in PARK?
 - If vehicle is not in park, this could prevent you from starting the engine.
- Does your Weego have enough charge?
 - If not, charge your Weego with the AC or Car adaptor provided.
- Are your battery terminals dirty?
 - Build-up on your battery terminals may be hindering conductivity. To clean terminals, detach the battery cables and use a wire brush or dry towel to clear off buildup.
- When you connect the clamps to your battery and then attach the Weego to the clamps, check the lights on the clamps.
 - IF RED LIGHT IS ON: You have connected the clamps to the wrong terminals. Please reread and follow steps in Quick Start Guide. DO NOT PRESS "BOOST"!
 - IF GREEN LIGHT IS ON: Your battery is still at a healthy level. You do not need to press "BOOST". See next step.
 - IF GREEN LIGHT IS BLINKING: Your battery is at a low, unhealthy level. You will need to press "BOOST" to jump start your vehicle.
 - IF NO LIGHT IS ON: You either have a poor connection, or your battery is extremely dead. Recheck all connections. If still no light appears, press "BOOST"
- Your engine may be too powerful for your Weego.
 - Our batteries work hard to supply the power you need, but some engines demand more than your Weego can give. You may want to try the next-largest Weego to better suit your needs (see myweego.com for guidelines).

- Your vehicle battery may not be the issue.
 - In most instances a dead battery is preventing an engine start, but there may be other functions in your vehicle that aren't working properly. Please refer to your vehicle owner's manual or visit your local service garage to determine what the issue may be.

My Weego will not power on.

- Charge your Weego. You should eventually see blinking indicator lights once your Weego has enough charge.
- If your Weego will not power on after a jump start, it needs to be connected to a charger to "reset" – this action only requires a few seconds on the charger.
 - Connect your Weego to provided wall charger
 - If on the road, connect your Weego to DC charger provided (cigarette charger) – even if your car battery is dead, it will still have enough power to reset your Weego.

Parts List

Description	Quantity
Weego Jump Starter Unit	1
Jumper Cables	1
Wall Charger	1
Car Charger	1
3-in-1 USB Charging Cord (w/Micro, 30-pin & Lightning Connectors)	1
8 Laptop/Device Connectors	1
Adaptor Cable	1
Owner's Manual	1
Quick Start Guide	1
Carrying Case	1

Spare parts are available for purchase at www.myweego.com

JS18 Technical Specifications

Battery Size: 18000 mAh

Milliampere-hour (mAh) - is a measure of charge: the higher the mAh, the more available power for your device.

Battery Type: Lithium polymer

Lithium polymer - It's what makes your rechargeable battery tick (not literally)! Quality li-poly battery cells provide long battery life and consistent performance.

Volts: 12V

Starting/Peak Current: 300A/600A

Max Input: 14V/1A

Max Output: 5V/1A; 5V/2A; 12V/10A; 19V/3.5A

Amps (A) measure the rate at which charge flows to and from your Weego. Higher 'A' means a faster charge.

USB Charging Port: 2

Auto OFF: Yes

Indicator Lights: 5

Charging Cycles: up to 1000

We are talking full cycles (a full charge + discharge).

Warranty

18 MONTH WARRANTY

WHAT THIS WARRANTY COVERS: PARIS CORPORATION ("Paris") sells its products with the intent that they are free of defects in material and workmanship under normal use and service for a period of 18 months from the date of original purchase, except as noted below.

This warranty extends only to consumers and specifically does not extend to retailers, sellers or their agents or employees. Paris does not authorize anyone, including, but not limited to, retailers, the subsequent consumer purchaser of the product from a retailer or remote purchasers, to obligate Paris in any way beyond the terms set forth herein.

This warranty does not cover damage caused by misuse or abuse; accident; alteration to the product; attachment of any unauthorized accessory; improper use of an electrical/power supply that causes malfunction; loss of power; dropped or crushed product; malfunction or damage of an operating part from failure to provide manufacturer's recommended maintenance; tampering with or attempt to modify the product; unauthorized opening of the product; transportation damage; theft; neglect; vandalism; environmental conditions; loss of use during the period the product is at a repair facility or otherwise awaiting parts or repair; or any other conditions whatsoever that are beyond the control of Paris.

This warranty is effective only if the product is purchased and operated in the country in which the product is purchased. A product that requires modifications or adaptations to enable it to operate in any other country than the country for which it was designed, manufactured, approved and/or authorized, or repair of products damaged by these modifications is not covered under this warranty.

This warranty does not extend to the purchase of opened, used, repaired, repackaged and/or resealed products, including but not limited to sale of such products on Internet auction sites and/or sales of such products by surplus or bulk resellers. Any and all warranties or guarantees shall immediately cease and terminate as to any products or parts thereof which are repaired, replaced, altered, or modified, without the prior express and written consent of Paris.

Paris shall not in any way be liable to you or any third party for any damages you or any third party may suffer as a result of use, intended or unintended, or misuse of this product in conjunction with any device, equipment or accessory other than the appropriate device or equipment for which this product is designed. Paris will not be responsible for any damages you or any third party may suffer as a result of misuse of this product outlined above. If you are responsible for this product's use with any unintended device and damages result from such use, you agree to indemnify Paris for any resulting injuries to any third parties.

WHAT IS THE PERIOD OF WARRANTY COVERAGE: This warranty starts on the date of original purchase and extends for 18 months from that date of original purchase. The duration of any implied warranty of merchantability or fitness for particular purpose of this product shall be limited in duration to the express warranty set forth above, 18 months from the date of original purchase.

WHAT WE WILL DO TO CORRECT DEFECTIVE PRODUCT: If Paris determines that a returned product has a defect in manufacture or workmanship under normal use, Paris will, at its sole discretion, repair or replace the defective part or parts, or if necessary, provide a like or comparable product from its product line. Paris will repair or replace the defective product free of charge and return the product to the stated consumer's US address only, free of

Warranty, con't

charge. If replacement parts for defective materials are not available, Paris reserves the right to make comparable product substitutions in lieu of repair or replacement. No refunds will be given. If Paris determines that the product is not defective, it will return the product to the consumer at the consumer's expense.

HOW DO YOU GET SERVICE: Keep a copy of your purchase receipt and you must register your purchase at myweego.com/register to activate the warranty. Failure to register your product and to provide proof of purchase may void the warranty. Check for the latest product updates at myweego.com when registering your purchase or when obtaining service.

To obtain warranty service, contact our **Weego Customer Service Specialist:**

- by email: support@myweego.com
- via online: myweego.com/support

DO NOT RETURN PRODUCT FOR WARRANTY SERVICE TO YOUR RETAILER. Please make sure to have the model number and serial number recorded when communicating with the Specialist. The Specialist will provide direction on how to return the defective product for service. Paris must be notified of claim within warranty period and in writing. Paris must receive product within 10 days after consumer notified Paris of a possible claim.

REMEDIES: The warranty provided herein shall be the sole and exclusive warranty. There shall be no other warranties express or implied, or any other obligation on the part of the company with respect to products covered by this warranty. Paris shall have no liability for any incidental, consequential or special damages. In no event shall this warranty require more than the repair or replacement of any part or parts which are found to be defective within the effective period of the warranty.

HOW STATE LAW MAY RELATE TO THE WARRANTY: This warranty provides you with specific legal rights. You may have additional rights which may vary from state to state. Because of individual regulations, some of the above limitations and exclusions may not apply to you.

FCC COMPLIANCE: Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.